DIY-28T Hand Tool for terminating HDMI cables in the field

M

P/N 68-011-01

Terminate HDMI Cables As Easy As 1-2-3!


Note: This tool is designed to work with Luxi HD DIY cables and connectors only.

Patent pending

Wire preparation

Please refer to the user manuals posted on Luxi Electronics website for detailed instructions.

Wire color coding for DIY regular cables:

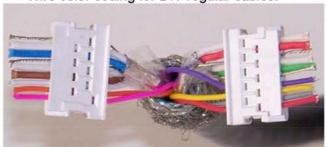

· Wire color coding for DIY ribbon cables:



- Pre-crimp and trim: Insert the top wire holder all the way into the No. 1 hole with the correct orientation, close the handles all the way in until the ratchet releases. Repeat for the bottom wire holder.
- 2. Core crimp: Pre-clip the top and bottom wire holders onto the connector core, then insert the whole assembly into the No. 2 hole, close the handles all the way in until the ratchet releases.
- 3. Strain relief crimp: Use fingers to pre-bend the strain relief metal tabs inwards, then insert the strain relief metal shells into the No. 3 hole, close the handles all the way in until the ratchet releases.







Clip on the top and bottom clamshells and it's done.

