




ASSEMBLY INSTRUCTION

etherCON® | NE8MX & NE8MX-B

Ruggedized RJ45 Data Cable Connector Carrier





- A** Special version remove the cover.
- A1** Cut off the release tab of RJ45 plug.

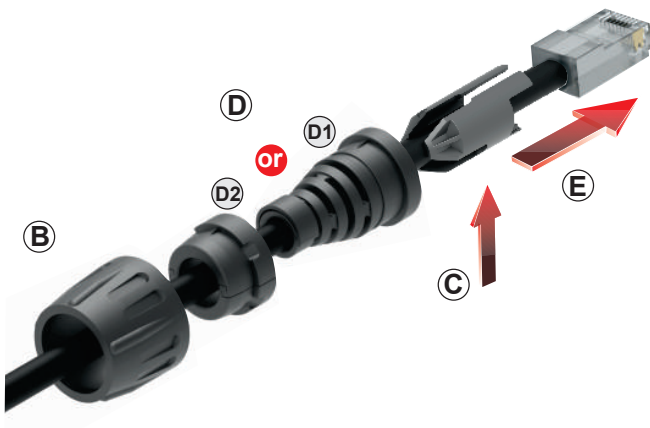

- B** Slide the bushing over the connector onto the cable.
- C** Put the chuck onto the cable. Align the opening with the contact side.
- D** Put the suitable boot on the cable:
- D1:
for cable O.D. 4.5 [0.18"] to 5 mm [0.2"]
- D2:
for cable O.D. 5.0 [0.2"] to 8 mm [0.3"]
- E**

STANDARD
VERSION

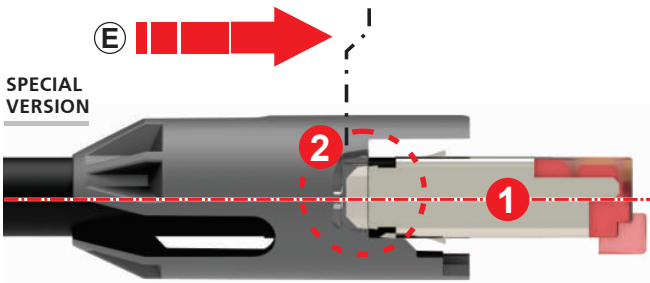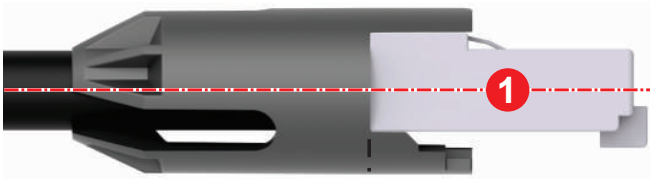


- E** Position the RJ45 in the chuck.

Attention:

- 1** RJ45 must be straight.
- 2** Special versions must engage in the inner recess of the chuck.



F Position the bushing onto the chuck.

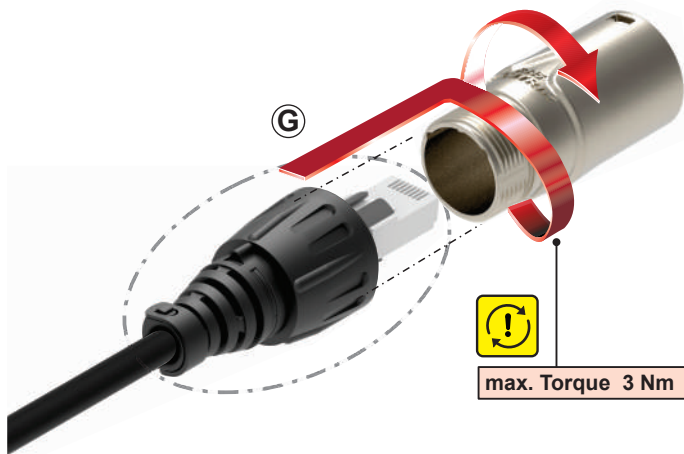

G Slide the unit (insert and boot) into the housing and tighten the bushing with max. torque 3 Nm (2.2 lb-ft).



H CAUTION:

There is no overlap allowed.



I Close the seal of the boot.

FINISHED etherCON® NE8MX:

Find more etherCON® details on www.neutrik.com.

