




ASSEMBLY INSTRUCTION

NP*X Series | 1/4" Professional Phone Plug

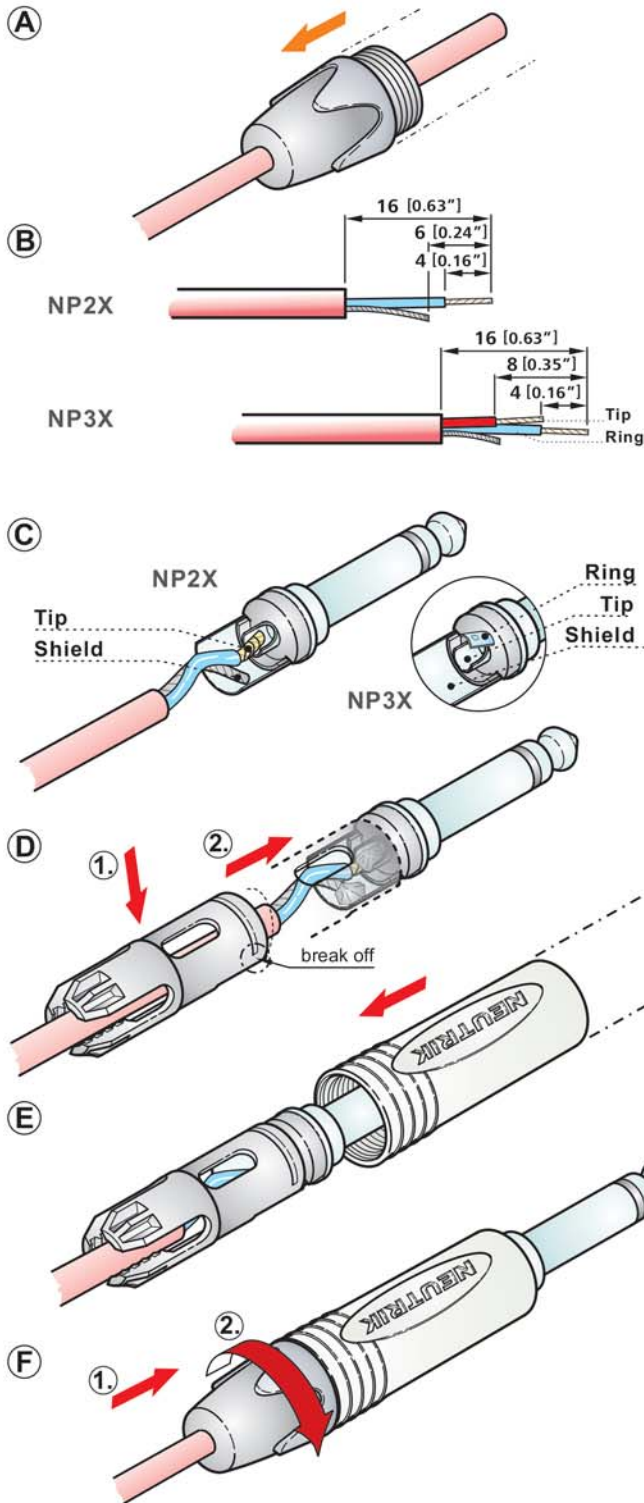

- A** Slide the boot onto the cable.
- B** Prepare cable as shown.
- C** Solder the wire ends.
- D** Position the chuck onto the cable and align chuck with plugfinger.
Attention:
If using a cable with O.D. > 5.50 mm [0.216"] break away this part of the chuck.
- E** Slide the housing onto the plugfinger with the chuck.
- F** Finish the installation by tighten the bushing onto the connector.



NEUTRIK

1723 W. 4th Street Tempe Arizona 85281

P: 800.638.6104 | F: 480.966.6728 | E: sales@covid.com www.covid.com