

# Termination Instructions



## Holland BNC Connectors



### STEP 1


- Strip cable using appropriate strip tool (CPT-5738 or Equiv.)
- Fold braid back evenly around cable jacket

Foil should remain on dielectric

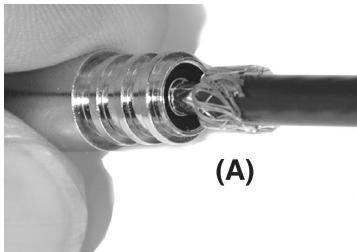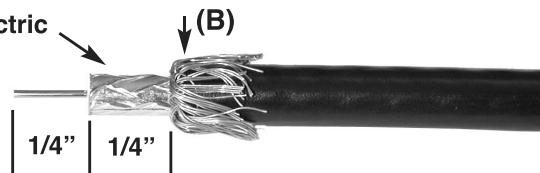

### STEP 2

- Insert prepared cable into connector
- Push cable forward into connector while twisting connector slightly.
- If using compression F, RCA or BNC connectors, cable braid should be visible in connector viewing window when cable is fully inserted.

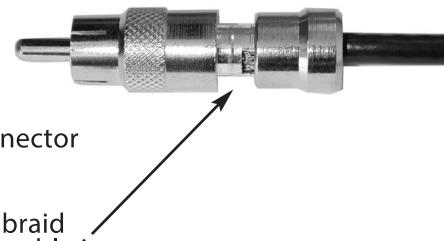

### STEP 3

- Insert prepared cable & connector assemble into appropriate compression tool (CT-FBR or Equiv.).
- Compress tool until tool has been fully compressed or ratchet handle releases.
- If using crimp F, RCA or BNC connectors, use any .270 hex crimp tool and fully crimp connector.



### TIPS & TRICKS

- DO NOT cut braid off. The braid is required for the full holding force.
- After stripping cable, ensure that there are no braid strands wrapped around cable center conductor.
- Before crimping or compressing connectors, install the cable assembly to ensure continuity of termination.
- F, BNC, & RCA connectors use the die marked BNC/RCA in the CT-FBR tool.

### RECOMMENDED TOOLS

CT-FBR  
Compression Tool



CPT5738  
Strip Tool



ACT-270  
Crimp Tool

